

ACCULINE

LASER LEVELS

PRO®

Machine Mountable 360° Detector **Model No. 40-6791C & 40-6791M**

Instruction Manual

The 40-6791C & 40-6791M are versatile, construction tough laser receivers that can be mounted on bull-dozers, motor-graders, drag scrapers, motorized scrapers, skidsteer loaders, backhoes and excavators. The built in super bright display and battery pack makes the 40-6791C and 40-6791M ideally suited for machine control applications.



40-6791C



40-6791M

Table of Contents

1. Technical Specifications
2. Location of Parts/Components
3. Operating Instructions

Kit Contents

Description Model No. 40-6791C

| | <u>Qty.</u> |
|--|--------------------|
| Machine Mountable 360° Detector with Clamp | 1 |
| Ni-MH Rechargeable Battery Pack | 1 |
| Cable | 1 |
| Charger | 1 |
| Instruction Manual with Warranty Card | 1 |
| Hard Shell Carrying Case | 1 |


Description Model No. 40-6791M


| | <u>Qty.</u> |
|---|--------------------|
| Machine Mountable 360° Detector with Magnet | 1 |
| Ni-MH Rechargeable Battery Pack | 1 |
| Cable | 1 |
| Charger | 1 |
| Instruction Manual with Warranty Card | 1 |
| Hard Shell Carrying Case | 1 |

1. Technical Specifications

| | |
|-----------------------|---|
| Detecting Range: | Up to 650' (200m) |
| Detecting Accuracy: | Fine: $\pm 3\text{mm}$ to $\pm 12\text{mm}$ Coarse: $\pm 5\text{mm}$ to $\pm 25\text{mm}$ |
| Receiving Range: | 10" (25cm) receiving window |
| Receiving Angle: | 360° |
| Power Supply: | 7.2V 3500mAH Ni-MH battery-pack |
| Battery Life: | approx. 40 hrs. (rechargeable battery) |
| Operating Voltage: | 12V and 24V |
| Charge time: | 16 hrs. |
| Fastening Device: | Clamp or magnet |
| Dimensions: | 14.88" x 4.72" x 8.07" (378 x 120 x 205mm) with clamp 14.80" x 3.14" x 5.86" (376 x 80 x 149mm) with magnet |
| Weight: | 6.8 lb. (3.1kg) |
| Working temperature: | -4°F to +122°F (-20°C to +50°C) |
| Additional functions: | Memory function of last received signal will be displayed. Powers off automatically when voltage is low. |
| Accessories: | Clamp (min 1.57" (40mm) circular pipe) or magnet. Cable for connecting to 12V or 24V external battery. Connecting cable for the JLT remote display. |

2. Location of Parts/Components

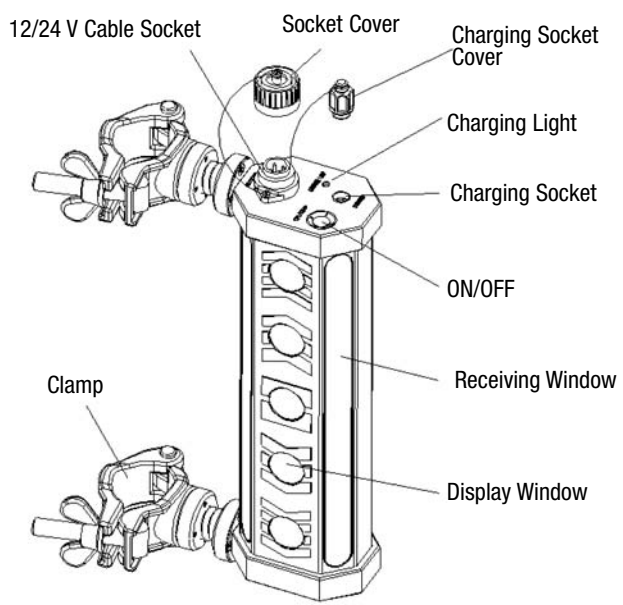

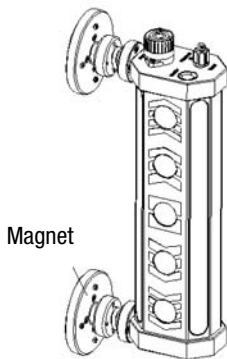

Charging Light: ON: Shows the detector is charging
OFF: Shows the detector is not charging



Up LED (red) Lights: Indicates the laser beam is above the on grade indicator

On Grade LED (green) Light: Indicates the laser beam is level with the on grade indicator


Down LED (red) Lights: Indicates the laser beam is under the on grade indicator





Power and Coarse/Fine Accuracy button: Turn on/off the power and change from coarse detecting to fine detecting

3. Operating Instructions

This product can be used to detect any type of rotating laser.

To turn on the detector, press  key, each LED will blink from top to bottom once. The detector is ready to begin detecting the laser beam. The detector is in coarse mode when first turned on.

Press the  key again to switch to the fine mode.

Press the  key for 4 seconds and the LEDs will blink from the center to two sides. The detector is now turned off.










After the power is turned on, to switch to the fine mode press the power key again. The two LEDs inside will blink three times simultaneously. The detector is now in fine mode.



To switch back to coarse mode, press the power key again. The two LEDs outside will blink three times simultaneously. The detector is now in coarse mode.

The LEDs will show the following when detecting the laser beam:

| LEDs are all off | The first up red LED blinks fast | The second up red LED blinks fast | The green LED blinks fast | The first down red LED blinks fast | The second down red LED blinks fast | The LED blinks slower |
|---|---|---|---|---|---|--|
|  |  |  |  |  |  |  |
| No laser beam is detected | The laser beam is up | The laser beam is up | The laser beam is level with the on grade LED (green) indicator | The laser beam is down | The laser beam is down | The last receiving position has been memorized by the detector. The detector will keep blinking until it receives another signal or is turned off. |

Note: When the voltage is low the detector will power off automatically and the unit needs to be charged.

Accessories

Connect the JLT 40-6791 to the 12V or 24V battery cable.



To charge the rechargeable battery use the AC adapter. The charging time is 16 hours.



The remote display 40-6792 is an optional accessory for this detector. It can be connected to the detector with a cable. Installing the remote display inside the cab will allow the operator to view the five indicating arrows up close rather than on the detector.



Detector Maintenance

- Keep the unit, particularly the reception window, clean. If it does get dirty, use a cloth to wipe it clean.

