

JOHNSON ®

Manual-Leveling Rotary Laser Level **Model Nos. 40-6502 and 40-6512**



Instruction Manual

Congratulations on your choice of this Manual-Leveling Rotary Laser Level. We suggest you read this instruction manual thoroughly before using the instrument. Save this instruction manual for future use.

This is a Class IIIa laser tool and is manufactured to comply with CFR 21, parts 1040.10 and 1040.11 as well as international safety rule IEC 285.

Table of Contents

- | | |
|------------------------------------------|----------------------------------|
| 1. Kit Contents | 8. Self-Check & Fine Calibration |
| 2. Features and Functions | 9. Technical Specifications |
| 3. Safety Instructions | 10. Application Demonstrations |
| 4. Location/Content
of Warning Labels | 11. Care and Handling |
| 5. Location of Parts/Components | 12. Product Warranty |
| 6. Operating Instructions | 13. Warranty Registration |
| 7. Using the Product | 14. Accessories |

1. Kit Contents

For Model No. 40-6502

Description	Qty.
Manual-Leveling Rotary Laser Level	1
“AA” Alkaline Batteries	4
Tinted Glasses	1
Instruction Manual with Warranty Card	1
Soft-sided Carrying Case	1

For Model No. 40-6512

Description	Qty.
Manual-Leveling Rotary Laser Level	1
“AA” Alkaline Batteries	4
Wall/Ceiling Mount	1
8’ Grade Rod	1
Detector with 2 “AAA” Batteries and Clamp	1
Tinted Glasses	1
Magnetic Target	1
Elevating Tripod	1
Instruction Manual with Warranty Card	1
Hard Shell Carrying Case	1

2. Features and Functions

- Emits a horizontal laser plane.
- Emits a vertical laser plane with simultaneous 90° split beam.
- Large and small scan modes achieve a chalk line.
- Scan line can be moved clockwise or counter-clockwise.
- Variable rotation speed.
- Rugged Housing.

3. Safety Instructions

Please read and understand all of the following instructions, prior to using this tool. Failure to do so, may void the warranty.

DANGER!

Class IIIa Laser Product
Max. Power Output: $\leq 5\text{mW}$
Wavelength: 625-645nm

**THIS TOOL EMITS LASER RADIATION.
DO NOT STARE INTO BEAM.
AVOID DIRECT EYE EXPOSURE.**



**ATTENTION****IMPORTANT**

- Read all instructions prior to operating this laser tool. Do not remove any labels from tool.
- Do not stare directly at the laser beam.
- Do not project the laser beam directly into the eyes of others.
- Do not set up laser tool at eye level or operate the tool near a reflective surface as the laser beam could be projected into your eyes or into the eyes of others.
- Do not place the laser tool in a manner that may cause someone to unintentionally look into the laser beam. Serious eye injury may result.
- Do not operate the tool in explosive environments, i.e. in the presence of gases or flammable liquids.
- Keep the laser tool out of the reach of children and other untrained persons.
- Do not attempt to view the laser beam through optical tools such as telescopes as serious eye injury may result.
- Always turn the laser tool off when not in use or left unattended for a period of time.
- Remove the batteries when storing the tool for an extended time (more than 3 months) to avoid damage to the tool should the batteries deteriorate.
- Do not attempt to repair or disassemble the laser tool. If unqualified persons attempt to repair this tool, warranty will be void.
- Use only original Johnson® parts and accessories purchased from your Johnson® authorized dealer. Use of non-Johnson® parts and accessories will void warranty.





4. Location/Content of Warning Labels





Mfg. for Johnson Level & Tool Mfg. Co., Inc.
 6333 W. Donges Bay Rd., Mequon, WI 53092
 Manufactured in China by JLT05
 Date (m/y): _____





5. Location of Part/Components

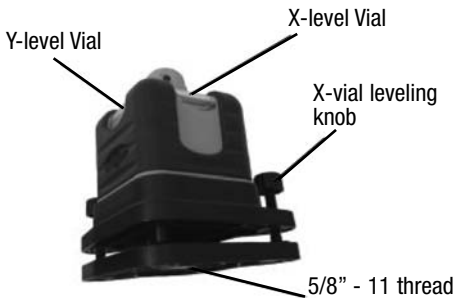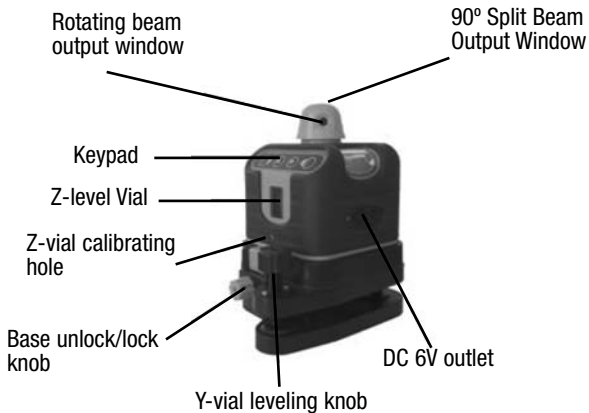




6. Operating Instructions

IMPORTANT: It is the responsibility of the user to verify the calibration of the instrument before each use.

1. Power ON/OFF
2. Power LED
3. Decrease rotation speed/rotate scan clockwise
4. Increase rotation speed/rotate scan counterclockwise
5. Scan and rotate mode LED
6. Scan mode key




1. **Power ON/OFF:** Press this key to turn on or turn off the laser.



- ON rotary laser is on, power LED (2) is on (when battery is low the power LED will blink)
- OFF laser and power LED (2) is off

2. **Scan mode key:** Press this key to change the scan size



Fast Rotation: When the laser is turned on, the laser is in its fastest rotation speed (scan & rotate mode LED (5) is on), laser is rotating.

Small scan: Laser is in small scan (scan & rotate mode LED (5) blinks).

Big scan: Laser is in big scan (scan & rotate mode LED (5) blinks).







DOT: Laser stops rotating and projects a DOT (scan & rotate mode LED (5) blinks).

3. UP and Down Keys:





In the rotation mode:

Press  rotation speed increases (Note: when turning the power on, the laser is in its highest rotation speed)

Press  rotation speed decreases

In the scan mode:

Press  scan moves in counterclockwise direction


Press  scan moves in clockwise direction





7. Using the Product

Connecting the Laser to its Base

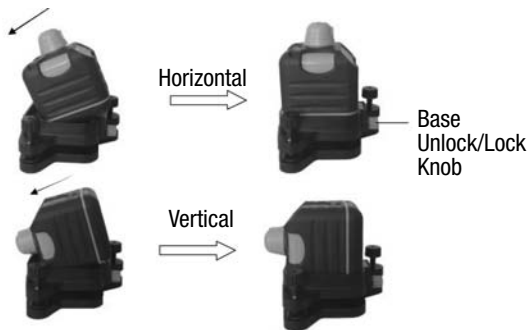

Position the two slots on the laser into the base, tighten the locking knob to secure the base to the laser. The laser can now be secured to a tripod.

Battery Installation

1. Disconnect the laser from the base as shown in the figure on the next page (rotate the base unlock/lock knob counterclockwise to unlock the laser from the base).
2. Remove battery cover (rotate the battery compartment knob counterclockwise to the open position).
3. Put in 4 "AA" alkaline batteries following the polarity specified in the battery compartment.






- Put the battery cover back into place (rotate the battery compartment knob to the lock position).



Level Vial Adjustment: To adjust the laser to center the vial.

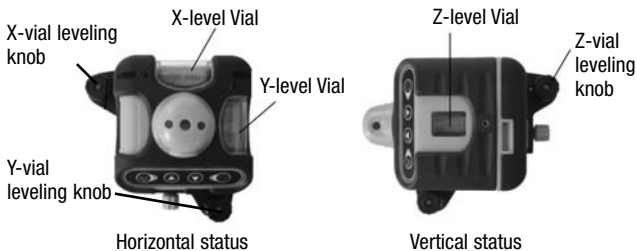

Horizontal Usage

- Put 4 "AA" alkaline batteries in the unit.
- As shown above, place the laser on a flat surface or 5/8" - 11 tripod
- Adjust the vial leveling knobs to center the bubble inside the X-vial and Y-vial.
- Turn on the laser.
- After finishing work, turn off the laser.





Vertical Usage

1. Put 4 “AA” alkaline batteries in the unit.
2. As shown in figure on previous page, place the laser on a flat surface or 5/8” - 11 tripod
3. Adjust the vial leveling knobs to center the bubble inside the Z-vial.
4. Turn on the laser.
5. After finishing work, turn off the laser.

Detector Usage (included in Model No. 40-6512)

1. Technical Specifications


Detecting accuracy	$\pm 1.5\text{mm}$ (<50m) $\pm 2.5\text{mm}$ (>50m)
Turn-off timer	6 min ± 1 min
Power	2 “AAA” Batteries
Battery life	45 hours of continuous use
Sound function	Short sound and solid sound
LED indication	Upper red, middle orange, middle green, down red
Size	4.645” x 2.637” x 0.984” (118mm x 67mm x 25mm)
Weight	0.253 lbs. (115g)





2. Components

(a) Structure

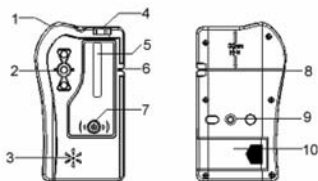

1. Holding Cord
2. Signal Indicator
3. Horn
4. Horizontal Vial
5. Detecting Window
6. Reference Front Marker
7. Power Key
8. Back Reference Marker
9. Connection Port
10. Battery Door

(b) Display



When first turning the detector on, the middle signal indicator turns red first and then turns green. If the horn gives two short sounds and the unit powers off automatically, it means that the battery voltage is seriously low and it is necessary to replace the battery immediately. When turning the power on and the down signal indicator flashes, it means that the battery is low and it is necessary to replace the battery.



Power Key: Turn on/off the instrument

3. Battery Installation

1. Open the battery cover and put the batteries into the battery case according to the polarity shown in the battery slot.
2. Snap the battery cover back.





Note: Take the batteries out when the unit is not in use for a long time.

4. Detecting Methods

1. This unit can detect a red rotating laser beam.
2. Press the Power Key once, the middle signal indicator will quickly turn red first and then turns green. It will beep once to indicate that the instrument is ON.

While detecting, the signal indicators show as follows:

The lower red LED is on	The upper red LED is on	The middle LED is orange	The middle LED is green	All LEDs are off
<p>Laser Line</p> <p>The laser beam is up</p>	<p>Laser Line</p> <p>The laser beam is down</p>	<p>Laser Line</p> <p>The laser beam is close to center</p>	<p>Laser Line</p> <p>The laser beam is exactly to center</p>	<p>No laser beam is detected</p>
Sound: Single short sound	Sound: Single short sound	Sound: Single short sound	Sound: Solid sound	Sound: No Sound

Note:

1. While detecting a horizontal laser beam, it is necessary to have the horizontal bubble vial centered, as the tilt of the detector will influence its receiving accuracy.

Horizontal Vial



2. Keep the detecting window facing the rotating laser.
3. Keep the detector still while detecting the laser beam
4. When the laser beam is centered, mark at the front reference marker.
5. When the detector does not receive a laser signal for 6 minutes, and there are no buttons pushed during these 6 minutes, the middle signal indicator will turn green first and then turn red. The horn will give two short sounds and the unit will power off automatically.



5. Accessories Usage

- Connecting to the grade rod bracket



- Connecting to the grade rod

The top of the bracket should be level with the back reference marker line



6. Maintenance


- When you are done using the detector, return it to its case.
- Keep the detector, particularly the detecting window, clean. If unit becomes dusty, use a clean cloth to gently wipe it clean.
- Avoid knocking the unit over or allowing it to fall on the ground.
- Although the detector is rain resistant, you should avoid submerging the unit in water or other liquids. If unit comes into contact with water or other liquids, wipe it dry immediately.
- Do not use unit around fire or expose it to fire in any way.



8. Self-Check & Fine Calibration

IMPORTANT: It is the responsibility of the user to verify the calibration of the instrument before each use.

X and Y-direction Vial Self-Check and Calibration

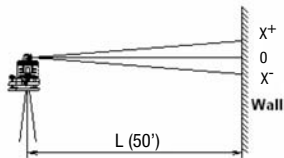

1. As shown in the figure above, place the laser at position L 50' away from the wall (start with the X-vial facing the wall).
2. Level the X and Y vials, turn on the laser, adjust the speed so the beam can be seen on the wall.
3. Mark the point where the laser beam hits the wall as X+.
4. Turn off the laser and turn it 180°, repeat step 3 and mark the point where the laser beam hits the wall as X-.
5. Measure the distance between X+ and X-. If it is more than 1/8" apart, the X-vial needs calibrating.
6. Repeat this same procedure for the Y vial.


Calibration Method

Mark the middle point as O between X+ and X- on the wall.

Using the X vial leveling knob, adjust the beam to the O point.



Use a 2.5 Metric Hex Key to remove the X vial screw in the X level vial calibration aperture. Then using the 2.5 Metric Hex Key, adjust the vial bubble to the middle of the vial as shown below. Repeat the same procedure for the Y vial.

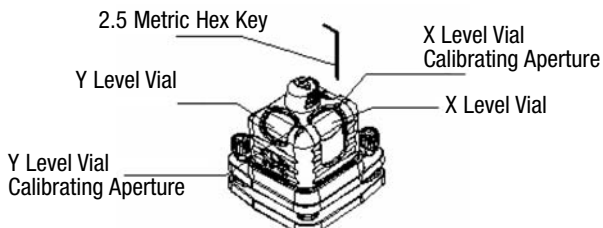



9. Technical Specifications

Laser Wavelength	635nm±10nm
Laser Classification	Class IIIa
Maximum Power Output	≤5mW
Accuracy	±1/4"/100 ft. (±2mm/10m)
Interior Range	Up to 200 ft. (60m) diameter depending upon light conditions
Exterior Range	Up to 800 ft. (240m) diameter with detector
Power Supply	4 "AA" alkaline batteries
Battery Life	Approx. battery life 15 hours continuous use
Dimensions	5.118" x 5.118" x 6.141" (130 x 130 x 156mm)
Weight	1.653 lbs. (0.75Kg)
Working Temperature	14°F to 113°F (-10°C to +45°C)
Center Screw Thread	5/8" – 11
Rotation speeds	150-300 rpm
Scanning mode	Large, Small, Dot
IP Protection Class	54





10. Application Demonstrations



Ceiling installation




Anti-static flooring installation



Window installation



Baseboard installation

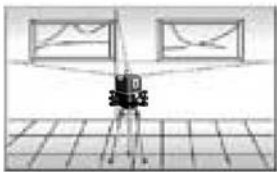

Hanging pictures



Dormer installation





11. Care and Handling

- This laser unit is a precision tool that must be handled with care.
- Avoid exposing unit to shock vibrations and extreme temperatures.
- Before moving or transporting the unit, make sure that the unit is turned off.
- Remove the batteries when storing the unit for an extended time (more than three months) to avoid damage to the unit should the batteries deteriorate.
- Always store the unit in its case when not in use.
- Avoid getting the unit wet.
- Keep the laser unit dry and clean, especially the laser output window.
Remove any moisture or dirt with a soft, dry cloth.
- Do not use harsh chemicals, strong detergents or cleaning solvents to clean the laser unit.

12. Product Warranty

Johnson Level & Tool offers a three year limited warranty on each of its products. You can obtain a copy of the limited warranty for a Johnson Level & Tool product by contacting Johnson Level & Tool's Customer Service Department, as provided below, or by visiting our web site at www.johnsonlevel.com. The limited warranty for each product contains various limitations and exclusions.

Do not return this product to the store/retailer or place of purchase.

Non-warranty repairs and course calibration must be done by an authorized Johnson® service center or Johnson Level & Tool's limited warranty, if applicable, will be void and there will be NO WARRANTY. Contact one of our service centers for all non-warranty repairs. A list of service centers can be found on our web site at www.johnsonlevel.com or by calling our Customer Service Department. Contact our Customer Service Department for Return Material Authorization (RMA) for warranty repairs (manufacturing defects only). Proof of purchase is required.





NOTE: The user is responsible for the proper use and care of the product. It is the responsibility of the user to verify the calibration of the instrument before each use.

For further assistance, or if you experience problems with this product that are not addressed in this instruction manual, please contact our Customer Service Dept.

In the U.S., contact Johnson Level & Tool's Customer Service Department at 888-9-LEVELS.

In Canada, contact Johnson Level & Tool's Customer Service Department at 800-346-6682.

13. Warranty Registration

Enclosed with this instruction manual you will find a warranty registration card to be completed for your product. You will need to locate the serial number for your product that is located on the bottom of the unit. **PLEASE NOTE THAT IN ADDITION TO ANY OTHER LIMITATIONS OR CONDITIONS OF JOHNSON LEVEL & TOOL'S LIMITED WARRANTY, JOHNSON LEVEL & TOOL MUST HAVE RECEIVED YOUR PROPERLY COMPLETED WARRANTY CARD AND PROOF OF PURCHASE WITHIN 30 DAYS OF YOUR PURCHASE OF THE PRODUCT OR ANY LIMITED WARRANTY THAT MAY APPLY SHALL NOT APPLY AND THERE SHALL BE NO WARRANTY.**





14. Accessories

Johnson® accessories are available for purchase through authorized Johnson® dealers. Use of non-Johnson® accessories will void any applicable limited warranty and there will be **NO WARRANTY**. If you need any assistance in locating any accessories, please contact our Customer Service Department.

In the U.S., contact Johnson Level & Tool's Customer Service Department at 888-9-LEVELS.

In Canada, contact Johnson Level & Tool's Customer Service Department at 800-346-6682.

